




CORREDERAS

CORREDERA H35

Guía de Instalación


Formato sin escala

3508BZ

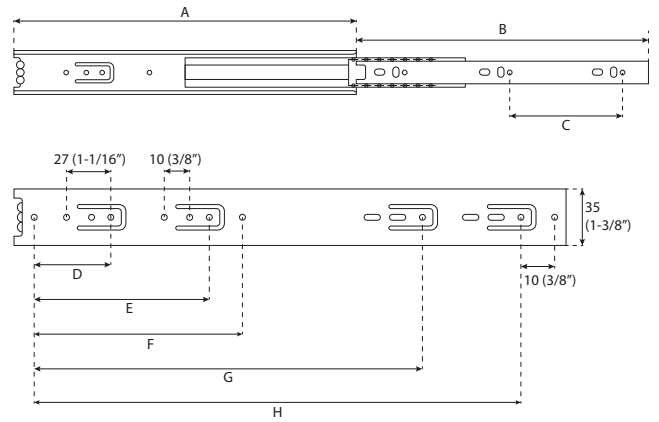

CODE/ CÓDIGO	A	B	C	D	E	F	G	H	
3508BZ250	9-13/16" / 250mm	9-13/16" / 250mm	3-3/4" / 96mm	1-5/8" / 41mm	-	-	5-3/16" / 131mm	7-11/16" / 195mm	20
3508BZ300	11-13/16" / 300mm	11-13/16" / 300mm	3-3/4" / 96mm	2-1/16" / 53mm	4-9/16" / 116mm	-	7-1/8" / 181mm	9-5/8" / 245mm	20
3508BZ350	13-3/4" / 350mm	13-3/4" / 350mm	5" / 127mm	1-1/4" / 32mm	3-3/4" / 96mm	5" / 127mm	9-3/16" / 234mm	11-3/4" / 298mm	20
3508BZ400	15-3/2" / 400mm	15-3/2" / 400mm	6-5/16" / 160mm	2-1/4" / 57mm	4-3/4" / 121mm	6" / 153mm	11-1/16" / 281mm	13-9/16" / 345mm	20
3508BZ450	17-11/16" / 450mm	17-11/16" / 450mm	6-1/4" / 159mm	1-1/4" / 32mm	3-3/4" / 96mm	5" / 127mm	13-1/8" / 334mm	15-1/16" / 398mm	20
3508BZ500	19-11/16" / 500mm	19-11/16" / 500mm	7-9/16" / 192mm	2-3/8" / 60mm	4-7/8" / 124mm	6-1/8" / 156mm	15" / 381mm	17-1/2" / 445mm	20
3508BZ550	21-5/8" / 550mm	21-5/8" / 550mm	8-7/16" / 214mm	3-1/8" / 80mm	5-11/16" / 145mm	6-15/16" / 176mm	17" / 432mm	19-1/2" / 496mm	20

Space requirement/ Requerimiento de espacio

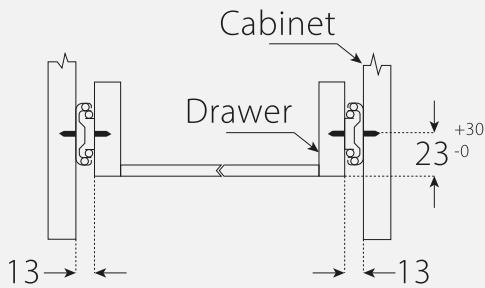

Installation dimensions/ Dimensiones de instalación (mm)

